


1. CORE DRILL WITH NOMINAL Ø 1" HOLES FOR ANCHOR BOLTS.
2. CORE DRILL BRICK TO MEMBRANE WITH Ø 2½" HOLE THROUGH BRICK TO MEMBRANE.
3. POUR REPAIR MEMBRANE INTO CORE TO TIE INTO EXISTING MEMBRANE.
4. FILL CORE WITH MORTAR (AFTER SETTING ANCHOR BOLTS).

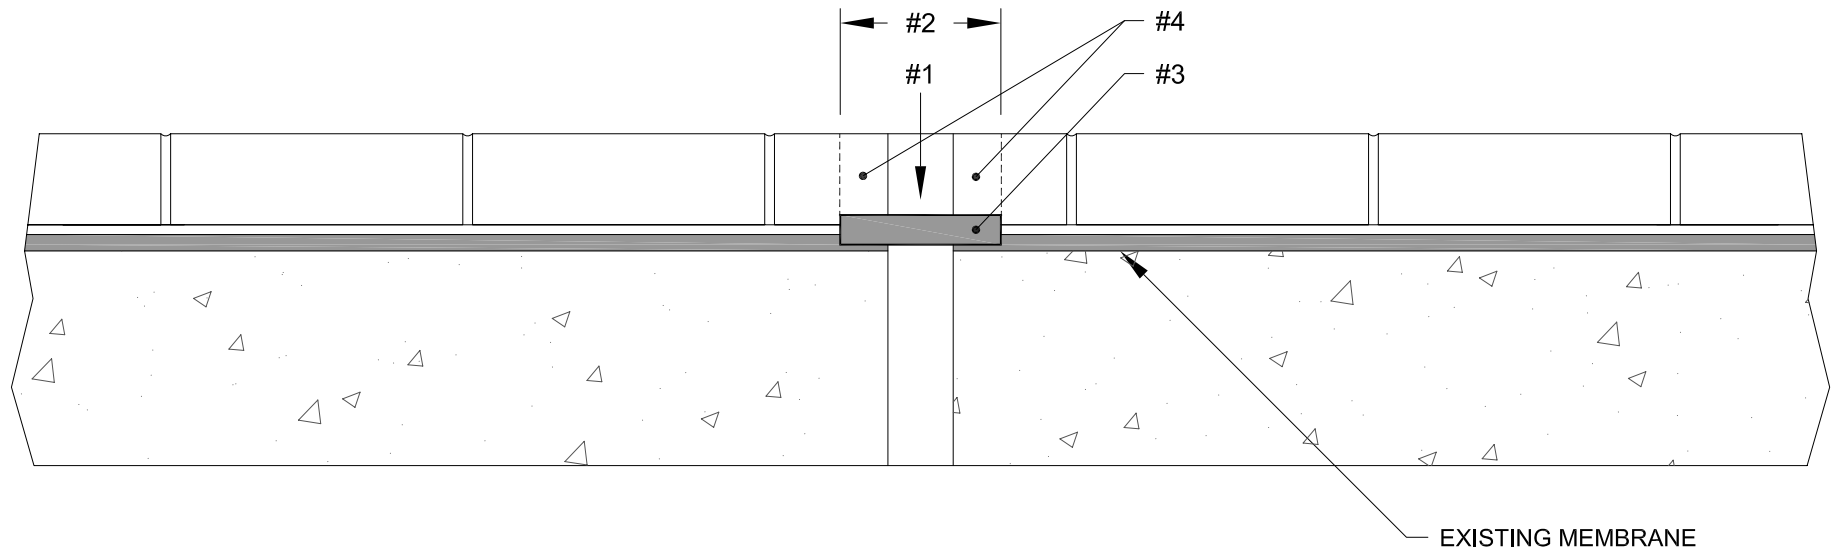

This drawing, including the principle of design, is the property of Armor and is submitted with the understanding that it will not be used for any purpose except that specified in writing by Armor. While all statements, technical information, and recommendations contained herein are based on information our company believes to be reliable, nothing contained herein shall constitute any warranty, express or implied, with respect to the products and/or services described herein and any such warranties are expressly disclaimed. We recommend that the prospective purchaser or user independently determine the suitability of our product(s) for their intended use. No statement, information or recommendation with respect to our products, whether contained herein or otherwise communicated, shall be legally binding upon us unless expressly set forth in a written agreement between us and the purchaser/user.

CED-1023 11/25

CORE HOLES IN BRICK FLOOR

NO SCALE
DRAWN BY: BL / SAB
COPYRIGHT: ARMOR

